 


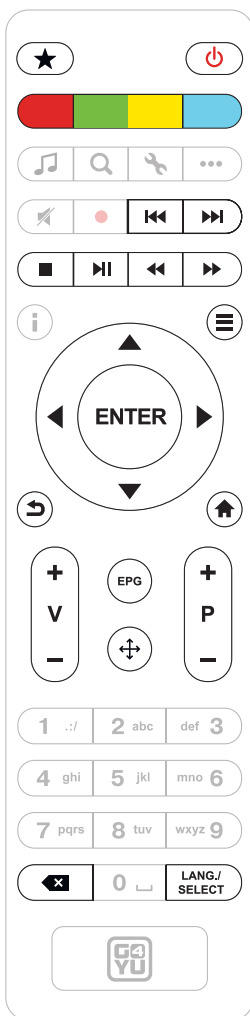


















STB Manual







-  Button for turning ON and OFF the STB device
-  Browser
-  Main menu
-   Basic menu
-  Types of channels / favorite channels / short menu / channel organization / restart the device / reload the main menu page
-  Navigation buttons to list 10 by 10 channels
-  Navigation buttons to rewind TV content (Catch Up)
-  Back button - Leave/go back to main menu or page
-  OK / accept / show information about channel
-  Navigation buttons / buttons for switching channels / buttons for navigating through options and menus
-  Delete
-  V - Buttons for volume
-  P - Buttons for previous/next channel
-  Select wanted time of broadcasted content in Catch up option
-  Go back to the last watched channel and main menu



By pressing the button  you turn on/turn off **GO4TV Set Top Box (STB)**.


On the home screen, you should see **MAIN MENU** in which you can choose whether you want to watch **TV channels, listen to the radio stations, watch movies in the video club, watch commercials or modify settings of the device.**


-  Yellow button, while you are in the main menu, reloads the operating system of the set top box device. This action causes the device to restart.
-  Blue button, while you are in the main menu, reloads the page which is opened on your screen.

You can always access the main menu by pressing the button  or by pressing the button  which will close all of the opened screens.

 
TELEVISION

By selecting the option TELEVISION in the main menu at the bottom of your screen, the basic menu will appear, with TV guide (EPG), list of local channels, list of TV shows in a particular channel, CatchUp option for the selected channel and a short description of the TV show.

 By pressing the button ENTER you switch to the desired channel

 Navigating through the menu is done by pressing the arrows (left, right, up, down), and awanted action is confirmed by pressing ENTER

Vreme trajanja CatchUp-a

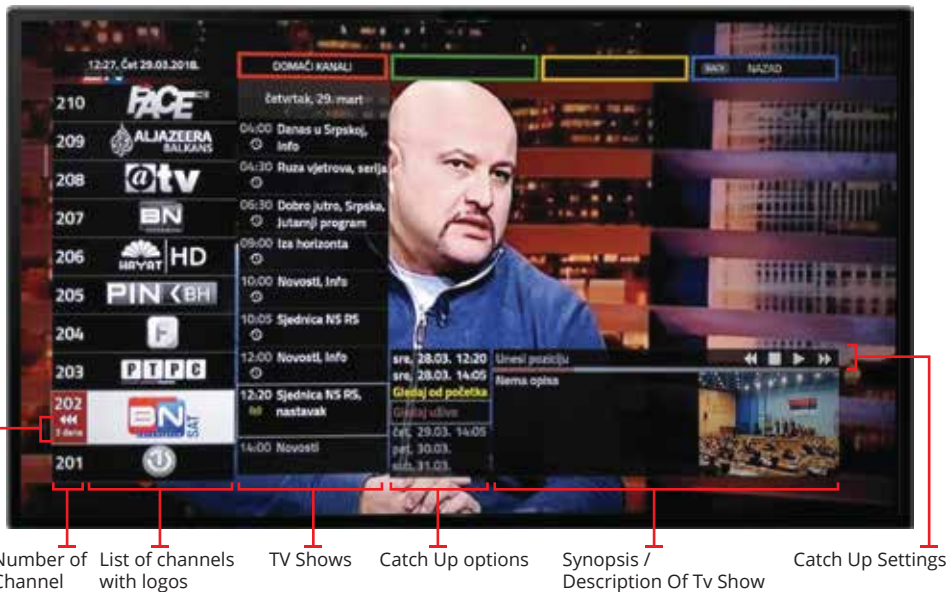

in alliance with GSS media

 


Channels and lists of channels

You can switch to the desired channel by entering the number of channel.



Buttons to use for switching channels

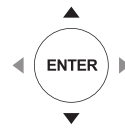

Navigation buttons to get to the desired channel.
The desired TV channel is chosen by pressing ENTER.



Navigation buttons for fast switching channels - 10 by 10 channels.



Going back to the last watched channel.



List of channels // Favorite | Local | HD | Kids | Sports | Music | Film | International



Opens a short menu (only list of channels and TV shows)



 
Add channel to Favorite channels



Edit channel lists



Vreme trajanja CatchUp-a

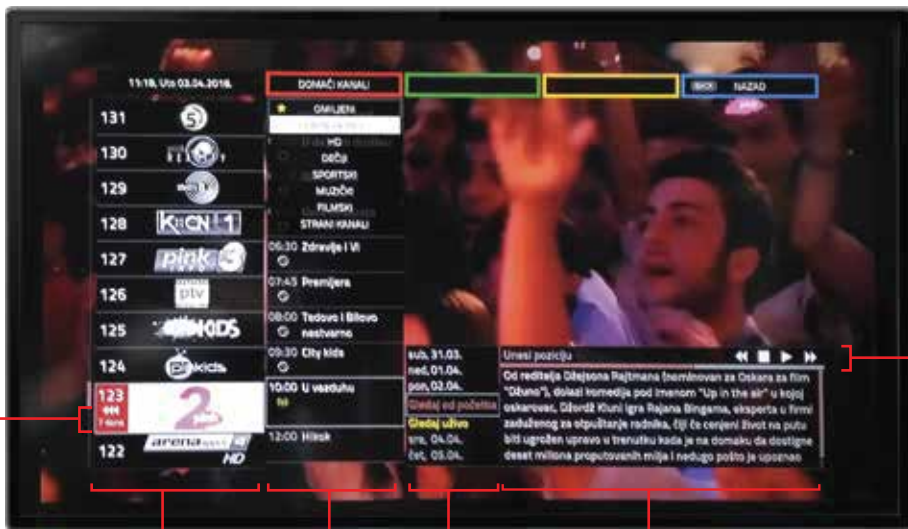

Catch up option - rewinding the content

In the list of channels, below the number of channel, you can see exactly how much you can rewind the content on that channel.

Besides the list of channels, there is a list of TV shows where you can see the time when each show starts and icons which mark the following:



TV show is broadcasted live



TV show can be watched from the beginning



Label which marks the show which is watched via Catch Up option

TV channel

Tv shows

CatchUp options

TV Show description (Synopsis)

Catch Up settings



Via **CatchUp option**, you can watch the desired TV show from the beginning or in some of the available periods from the past days.

CatchUp settings - you can rewind or fast forward the content, as well as stop and play the content.

Rewinding, pausing and playing the show can be done by pressing buttons on your remote control, or by selecting on of the following icons in CatchUp options in the main menu or by selecting the desired time by pressing the button

Fast forward option is not available for TV shows that broadcast live.

LANG/SELECT

Prelazak na željeno vreme emitovanog sadržaja u Catch up opciji




in alliance with GSS media






Radio channels

You can open your favorite radio channel by entering the number of the channel or by pressing the button for switching channels. In the list, there are radio channels sorted by countries.

Switching the lists of radio channels is done by pressing the  button. In the list, there are radio channels sorted by countries.

 Add channel to Favorite channels

 Edit channel lists



Video club

We offer the best movies of EX YU cinematography.

It is possible to make a list of your favorite movies. You can always continue watching the movie which you didn't watch till the end.

Every movie has a short description which you can see by clicking on the desired movie.





BROWSER AND APPLICATIONS ★

Allows you to use your TV device as an internet browser. You also have applications which you can use to watch multimedia content.



SETTINGS

In the settings which you access through “main menu”, there are:

- Information about the device and software version,
- System messages as well as changes made inside the lists,
- Language and date settings
- Change password
- Update software
- Contact information of customer service